


Contractor shall check all dimensions on the work and report any discrepancy to the Landscape Architect before proceeding. All drawings and specifications are the property of the Landscape Architect and must be returned at the completion of the work. This drawing is not to be used for construction until signed by the Landscape Architect.

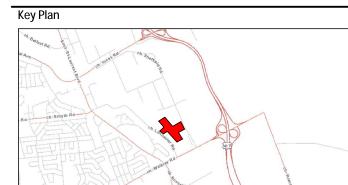

PROJECT LIMIT

PROPERTY LINE

EXISTING TREES TO BE RETAINED (REFER TO TCR)

PROJECTED FUTURE TREE CANOPY COVER

(CALCULATED TO 1m DEPTH)

SHRUB PLANTING BED

DETAIL NO. SHEET NO.



Project Consultants:


Date

No. Description

Revision

Geotechnical Engineering
Paterson Group

5 Re-Issued for SPA 4 Re-Issued for SPA 3 Re-Issued for SPA Sep.26/24 2 Issued for SPA Aug.9/24 1 Issued for Coordination Jun. 6/24

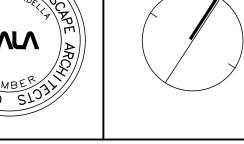

design strategies


1285 WELLINGTON STREET, OTTAWA, ON K1Y 3A8 CANADA T 613.237.2345 NAKDESIGNSTRATEGIES.COM


SHEFFIELD ROAD WAREHOUSE

2760 - 2770 SHEFFIELD ROAD OTTAWA, ON


LANDSCAPE PLAN

Date December 2024 Scale 1:750 Drawn NM Checked PG Job No. 23-005

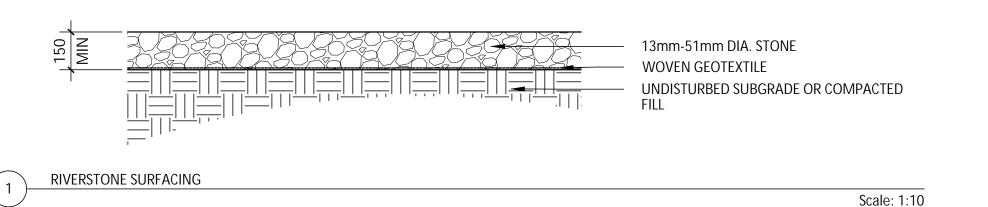

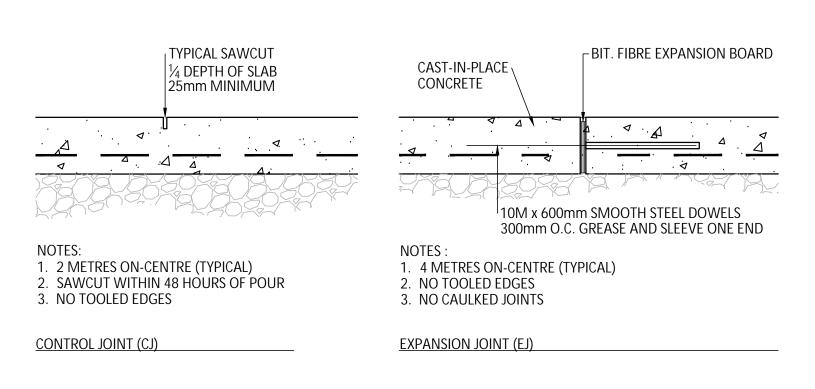

N.T.S

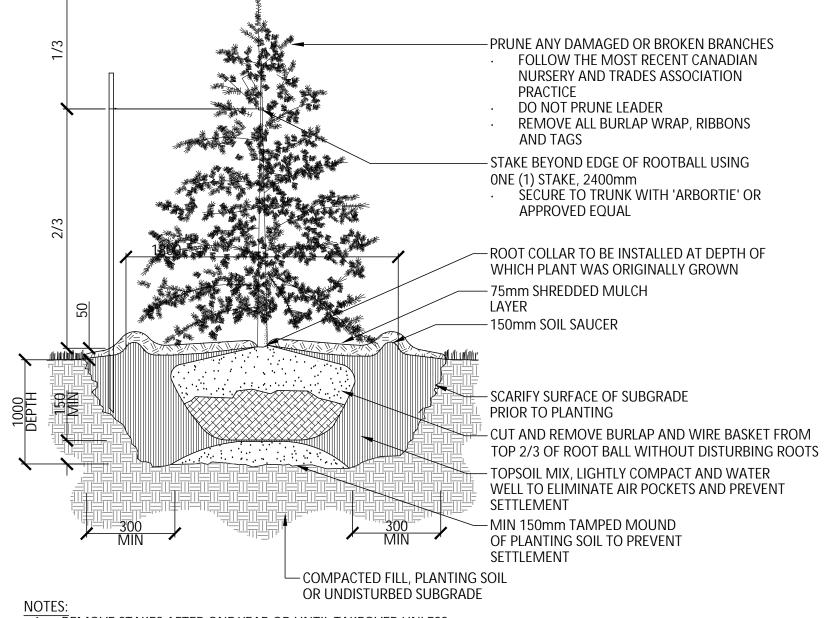

1. REMOVE STAKES AFTER ONE YEAR OR UNTIL TAKEOVER UNLESS OTHERWISE DIRECTED BY THE LANDSCAPE ARCHITECT. 2. TOPSOIL MIXTURE AND SHREDDED MULCH AS PER SPECIFICATION

CONIFIEROUS TREE PLANTING

SHRUB BED PLANTING

N.T.S

REMOVE DAMAGED OR OBJECTIONABLE BRANCHES, FOLLOW THE MOST RECENT CANADIAN NURSERY & TRADES ASSOCIATION PRACTICE. DO NOT PRUNE LEADER 75mm DEPTH SHREDDED MULCH. PULL BACK MULCH FROM BASE OF SHRUBS. ENSURE THAT MULCH COVERS TWITH \$PECIEST

TOPSOIL MIXTURE AND SHREDDED MULCH AS PER SPECIFICATION. 2. SHRUBS SPECIFIED BARE ROOT (B.R.) TO BE PLANTED SO THAT ROOTS ARE FULLY EXTENDED IN

3. PROVIDE 100mm HIGH EARTH SAUCER AROUND SHRUB BED.

N.T.S

 32 MPa FINISHED GRADE -150x150 WELDED WIRE MESH - OPSS GRANULAR 'A' COMPACTED TO 98% SPD — COMPACTED SUBGRADE

CONCRETE PAVING Scale: 1:10 Scale:1:10

BIKE RACK

CROSS SLOPE

MAGLIN 300

SPACES

SERIES, WITH 5

REFER TO PLAN FOR

**ADJACENT** 

SURFACE

CIP CONCRETE

COMPACTED


SUBGRADE

32 MPa

GRANULAR 'A' BASE

PER OPSS

**SPECIFICATIONS** 

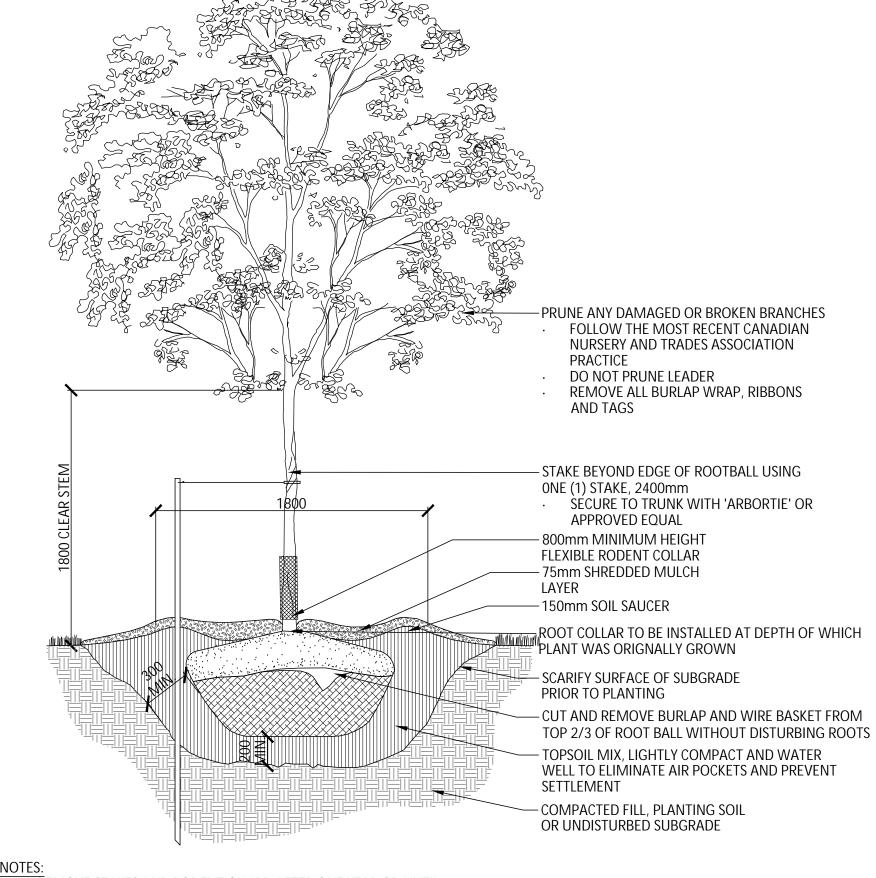

1. REMOVE STAKES AND RODENT GUARD AFTER ONE YEAR OR UNTIL TAKEOVER, UNLESS OTHERWISE DIRECTED BY THE LANDSCAPE ARCHITECT.

2. TOPSOIL MIXTURE AND SHREDDED MULCH AS PER SPECIFICATION REMOVE TREE WRAP AFTER PLANTING

4. CALIPER TO BE MEASURED AT THE BASE OF TREE AT ROOT BALL.

DECIDUOUS TREE PLANTING

Contractor shall check all dimensions on the work and report any discrepancy to the Landscape Architect before proceeding. All drawings and specifications are the property of the Landscape Architect and must be returned at the completion of the work. This drawing is not to be used for construction until signed by the Landscape Architect.

- CAST-IN-PLACE CONCRETE

Project Consultants:

Surveyor Annis O'Sullivan Vollebekk Ltd.

Geotechnical Engineering Paterson Group

No. Description

Revision

5 Re-Issued for SPA 4 Re-Issued for SPA Sep.26/24 3 Re-Issued for SPA 2 Issued for SPA Aug.9/24 Jun. 6/24 1 Issued for Coordination

Date

design strategies

1285 WELLINGTON STREET, OTTAWA, ON K1Y 3A8 CANADA T 613.237.2345 NAKDESIGNSTRATEGIES.COM

SHEFFIELD ROAD WAREHOUSE 2760 - 2770 SHEFFIELD ROAD OTTAWA, ON

Date December 2024 Scale AS SHOWN Drawn PG Checked PG Job No. 23-005

DETAILS

APPROVED By Lily Xu at 9:44 am, Mar 28, 2025 LILY XU, MCIP, RPP MANAGER, DEVELOPMENT REVIEW SOUTH PLANNING, DEVELOPMENT, AND BUILDING SERVICES DEPARTMENT, CITY OF OTTAWA

REMOVE POTS COMPLETELY FROM POTTED STOCK OR CUT AND REMOVE BURLAP AND WIRE FROM TOP 2/3 OF ROOT BALL - TOPSOIL MIX, LIGHTLY COMPACT ADD WATER TO **CUT AND REMOVE** WELL TO ELIMINATE AIR POCKETS AND PREVENT **BURLAP AND WIRE** SETTLEMENT BASKET FROM TOP - SCARIFY SUBGRADE SURFACE OF 2/3 OF ROOT BALL PLANTING BED PRIOR TO PLANTING

PLANTING HOLE WITH SOIL MIX BACKFILLED CAREFULLY TO PREVENT ROOT DAMAGE.

N.T.S

CONTINUOUS TREE PLANTING TRENCH

1800 LEAR STEM

1. REMOVE STAKES AND RODENT GUARD AFTER ONE YEAR OR UNTIL

2. TOPSOIL MIXTURE AND SHREDDED MULCH AS PER SPECIFICATION

4. CALIPER TO BE MEASURED AT THE BASE OF TREE AT ROOT BALL.

TAKEOVER, UNLESS OTHERWISE DIRECTED BY THE LANDSCAPE ARCHITECT.

STAKE BEYOND EDGE OF ROOT BALL USING ONE (1) STAKE 2400mm (MIN) LONG. SECURE TRUNK IN THE DIRECTION OF PREVAILING WIND WITH ARBOR TIES ARBOR TIE SHALL BE FASTENED IN A

MANNER WHICH SUPPORTS TREE, AND

ALLOWS FOR SLACK TO PERMIT SOME

-APPLY 800mm MINIMUM HEIGHT FLEXIBLE PLASTIC RODENT COLLAR

TRUNK MOVEMENT

-ROOT COLLAR TO BE SET 100mm ABOVE FINISHED GRADE

-75mm SHREDDED MULCH AS PER SPECIFICATIONS

-CONSTRUCT 100mm SAUCER HT. AROUND TREE BASE

MAX 3:1 RESULTING SLOPE

-SCARIFY SURFACE OF SUBGRADE

PRIOR TO PLANTING -CUT AND REMOVE BURLAP AND WIRE BASKET FROM TOP 2/3 OF ROOT BALL WITHOUT DISTURBING ROOTS

-TOPSOIL MIX, LIGHTLY COMPACT AND WATER WELL TO ELIMINATE AIR POCKET AND PREVENT SETTLEMENT

—COMPACTED SUBGRADE

DECIDUOUS TREE PLANTING ON SLOPE

REMOVE TREE WRAP AFTER PLANTING

N.T.S



Contractor shall check all dimensions on the work and report any discrepancy to the Landscape Architect before proceeding. All drawings and specifications are the property of the Landscape Architect and must be returned at the completion of the work. This drawing is not to be used for construction until signed by the

Landscape Architect.

Project Consultants: Architecture & Site Plan Ware Malcomb

Surveyor Annis O'Sullivan Vollebekk Ltd. Transportation Engineering Castleglenn

Geotechnical Engineering Paterson Group

5 Re-Issued for SPA 4 Re-Issued for SPA 3 Re-Issued for SPA Sep.26/24 Aug.9/24 Jun. 6/24 2 Issued for SPA 1 Issued for Coordination No. Description
Revision Date

design strategies

1285 WELLINGTON STREET, OTTAWA, ON K1Y 3A8 CANADA T 613.237.2345 NAKDESIGNSTRATEGIES.COM

SHEFFIELD ROAD WAREHOUSE 2760 - 2770 SHEFFIELD ROAD OTTAWA, ON

DETAILS

Date December 2024 Scale AS SHOWN Drawn PG Checked PG

Job No. 23-005